


sunlite® **T300**

05005-SU

7 DAY HEAVY-DUTY APPLIANCE TIMER

PROGRAMING & SAFETY INSTRUCTIONS

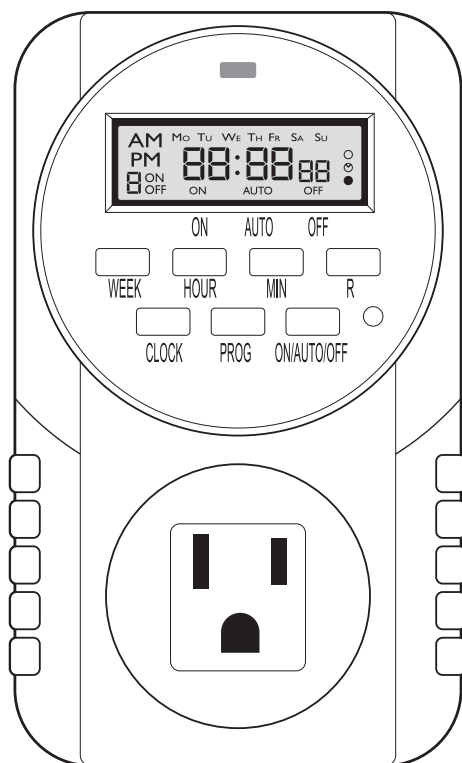

Applications:

- Lighting
- Cooling systems
- Humidifiers
- Aquariums
- Heating systems
- Indoor sprinklers
- Nebulizers
- Ventilators

RATINGS

Rated Voltage: 115VAC, 60Hz, 15A **Max.Loading:** 1725W
Timer Consumption Power: 2W Max.


WARNING

- Electrical shock hazard • Risk of injury or death • Risk of fire
- For indoor use only • Use a grounded outlet • Follow local electrical codes

Sunlite® • www.sunshinelighting.com

BEFORE YOU START

- Plug timer in for at least 5 minutes before programming.
- Press **RESET** button (Using a pin), to reset the clock & timer.
 - Note: These steps **MUST** be taken before initial use, or when the timer needs to be reset.

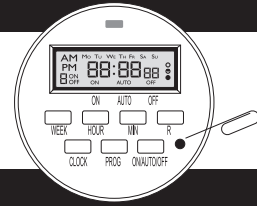

SET UP DAY & TIME

- Press & Hold **CLOCK**, and Press **WEEK** to select the current **DAY**. (Fig 02)
- Press & Hold **CLOCK**, and Press **HOUR** to select the current **HOUR**. (Fig 02)
- Press & Hold **CLOCK**, and Press **MIN** to select the current **MIN**. (Fig 02)
 - **DST - DAYLIGHT SAVING TIME**
- Press **HOUR & MIN simultaneously** to activate or deactivate **DST**. (Fig 03)

Note: A small clock symbol will appear on the far right of the LCD screen, while DST is active.

PROGRAMMING / SCHEDULE

- You may program the timer for up to 16 events per day.
- A time setting to **Turn On**, is an **ON EVENT**.
- A time setting to **Turn Off**, is an **OFF EVENT**.
- Press & Release **PROG** to enter **PROGRAMMING MODE** and select your **EVENT**. (Fig 04)

Note: Every time you press **PROG** you advance to the next **EVENT**.
- Press **WEEK** to select your day/s for your selected **EVENT**. (Fig 05)

Note: Press **WEEK** multiple times until you get the day combination you want.
- Press **HOUR** then **MIN** to select a time for your selected **EVENT**. (Fig 05)
 - Press **R** to **clear** the display. Press **R** again to **restore** the display.

MODE SELECTION

- After setting up your timer, there are 4 operating modes:
 - **ON** - Power is on - Timer is not active. (Fig 06)
 - **OFF** - Power is off - Timer is not active. (Fig 07)
 - **AUTO** - Uses the timer settings you programmed. (Fig 08)
 - **RANDOM** - Adjusts your settings by random 2 minute increments of ± 30 minutes. (Fig 09)

This makes it look as if someone is in the house.
- Press **ON/AUTO/OFF** to select one of these modes. (Fig 06, 07, 08)
- Press **WEEK & HOUR simultaneously** to activate or deactivate the **RANDOM** mode. (Fig 09)

Note: A small hollow circle will appear on the far right side of the LCD screen, while **RANDOM** mode is active.



Fig 02



Fig 03



Fig 04



Fig 05



Fig 06



Fig 07



Fig 08



Fig 09

