 


sunlite®

INSTALLATION INSTRUCTIONS

LED ROUND UP/DOWN WALL SCONCE

88132-SU | LFX/R/UD/20W/50K
88133-SU | LFX/R/UD/20W/30K

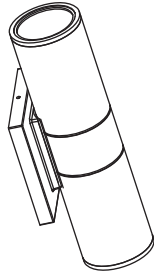

A

Introduction



M4*30 Screws



Wirenuts



1 x Base Plate



Plate Screw





Part	Item Name	Qty.
A	Led Round U/D Fixture	1
b	M4 x 30MM Screws	2
c	Wirenuts	3
d	Base Plate	1
e	Plate Screw	2

Select suitable location that can support the weight of the fixture.

Suitable for use in the following locations:

- Wall Mount Only
- WET locations
- Maximum Ambient Operating Temperature 40°C

    Installation

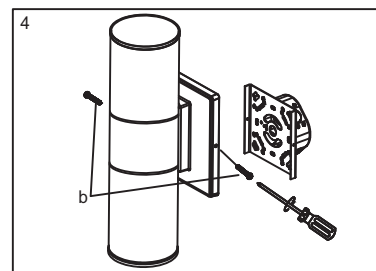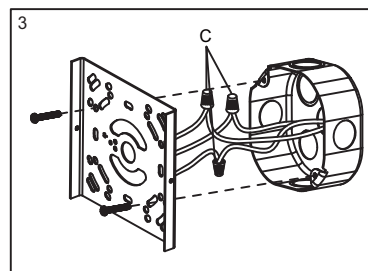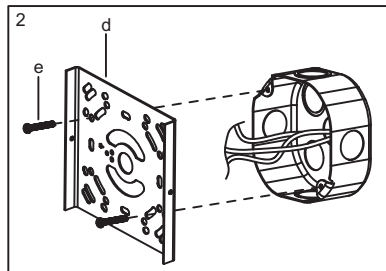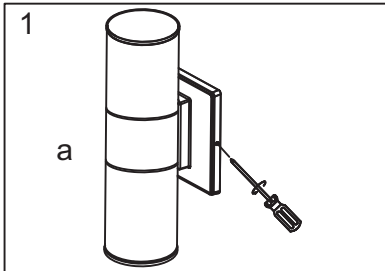

Step 1. Opening Package and then taking the lamp out and screw out the square mounting plate from the fixture (a).

Step 2. Install the square mounting plate (d.) on the mounting box with mounting screws (e.).

Step 3. Electrical connection: Make sure electricity to the circuit is turned off. connect the input wire from fixture with internal wire from the junction box, Ground wire to Ground wire, L to L, N to N(c.).

Step 4. Secured the mounting bracket of the light fixture to junction box with the screws, tighten the screws (b.) and make sure the lamp is fixed firmly.

Step 5. Turn power on.

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING: Avoid fire or electric shock. Follow installation instructions carefully. If unsure about electrical installation, consult a qualified electrician. Wear rubber-soled shoes and work on a sturdy wooden ladder. Ground fixture to avoid potential electric shock. Handle metal parts carefully to prevent cuts. To avoid a hazard to children, account for all parts and destroy all packing materials.



This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Turn off the power at fuse or circuit breaker box before installation and maintenance. NOTE: This fixture is suitable for 100-277 VAC at 60Hz. Fixture must be installed according to National Electric Code and local building codes. If you are unsure about wiring, consult a qualified electrician. Suitable for Wet Locations.

Do not make or alter any open holes in an enclosure of wiring or electrical components during installation. To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects. Do not alter, relocate, or remove wiring, lampholders, power supply, or any other electrical component.

Sunshine Lighting Company

744 Clinton Street Brooklyn, NY 11231, USA

T. 718.768.7000

F. 718.768.0970

www.sunlite.com